

# ESM-7311-H 35 x 77 DIN Size Digital, ON / OFF Heating Controller

- 3 Digits display
- NTC Input or, PTC Input or,
- J type Thermocouple Input or,
- K type Thermocouple Input or,
- 2-Wire PT 100 Input or,
- 2-Wire PT 1000 Input (It must be determined in order)
- ON/OFF temperature control
- Adjustable temperature offset
- Set value low limit and set value high limit boundaries
- Relay or SSR driver output
- Digital Input (Cooking time start/stop input)
- Adjustable cooking time from front panel
- Temperature control according to the cooking time (Timer)
- User can select to start cooking time (Timer) when temperature reaches to the set value
- Temperature control with manual heating function
- Alarm parameters
- Adjustable internal buzzer according to cooking time, probe defect and alarm status
- Button protection
- Password protection for programming section

#### **ABOUT INSTRUCTION MANUAL**

Instruction manual of ESM-7311-H Heating Controller consists of two main sections. Explanation of these sections are below. Also, there are other sections which include order information and technical specifications of the device. All titles and page numbers in instruction manual are in "CONTENTS" section. User can reach to any title with section number.

#### Installation:

In this section, physical dimensions of the device, panel mounting, electrical wiring, physical and electrical installation of the device to the system are explained.

#### **Operation and Parameters:**

In this section user interface of the device, accessing to the parameters, description of the parameters are explained.

Also in these sections, there are warnings to prevent serious injury while doing the physical and electrical mounting or using the device.

Explanation of the symbols which are used in these sections are given below.



This symbol is used for safety warnings. User must pay attention to these warnings.



This symbol is used to determine the dangerous situations as a result of an electric shock. User must pay attention to these warnings definitely.



This symbol is used to determine the important notes about functions and usage of the device.

Contents	
1.PREFACEPage 1.1 GENERAL SPECIFICATIONS 1.2 ORDERING INFORMATION 1.3 WARRANTY 1.4 MAINTENANCE	5
2.INSTALLATION	7
3.1 TERMINAL LAYOUT AND CONNECTION INSTRUCTIONS 3.2 ELECTRICAL WIRING DIAGRAM 3.3 VIEW OF THE DEVICE LABEL 3.4 SUPPLY VOLTAGE INPUT CONNECTION OF THE DEVICE 3.5 TEMPERATURE INPUT SENSOR CONNECTION 3.5.1 TC (THERMOCOUPLE) CONNECTION 3.5.2 PTC AND NTC CONNECTION 3.5.3 PT-100 AND PT-1000 CONNECTION	12
3.6 GALVANIC ISOLATION TEST VALUES OF ESM-7311-H TEMPERATURE CONTROLLER 3.7 OUTPUT CONNECTIONS 3.7.1 RELAY OUTPUT CONNECTION 3.7.2 SSR DRIVER OUTPUT CONNECTION	
4.FRONT PANEL DEFINITION AND ACCESSING TO THE MENUS	19
4.6 OPERATION GRAPHICS OF ESM-7311-H HEATING CONTROLLER 4.7 EASY ACCESS DIAGRAM OF PROGRAMMING SECTION PARAMETERS 4.8 ENTERING TO THE PROGRAMMING MODE, CHANGING AND SAVING PARAMETERS	
5.FAILURE MESSAGES IN ESM-7311-H HEATING CONTROLLERPage	29
6.SPECIFICATIONSPage	30

# **EU DECLARATION OF CONFORMITY**

Manufacturer's Name : EMKO ELEKTRONIK A.S. Manufacturer's Address : DOSAB, Karanfil Sk., No:6,

16369 Bursa, TURKEY

The manufacturer hereby declares that the product:

Product Name : Heating Controller

Type Number : ESM-7311H

Product Category : Electrical equipment for measurement, control and

laboratory use

Conforms to the following directives:

2006 / 95 / EC The Low Voltage Directive

2004 / 108 / EC The Electromagnetic Compatibility Directive

has been designed and manufactured to the following specifications:

EN 61000-6-4:2007 EMC Generic Emission Standard for Industrial Environments

EN 61000-6-2:2005 EMC Generic Immunity Standard for Industrial Environments

EN 61010-1:2001 Safety Requirements for electrical equipment for measurement, control

and laboratory use

When and Where Issued Authorized Signature

22<sup>nd</sup> December 2010 Name : Serpil YAKIN

Bursa-TURKEY Position : Quality Manager

#### 1.Preface

ESM-7311-H series heating controllers are designed for measuring and controlling temperature. They can be used in many applications with their easy use, On/ Off control form and cooking time properties.

Some application fields which they are used are below:

#### **Application Fields**

Glass

Food

**Plastic** 

Petro-Chemistry

Textile, Automative

Machine Production Industries

etc...

#### **Applications**

Heating

**Baking Ovens** 


**Incubators** 

**Storages** 

Air Conditioning

Etc...

# 1.1 General Specifications

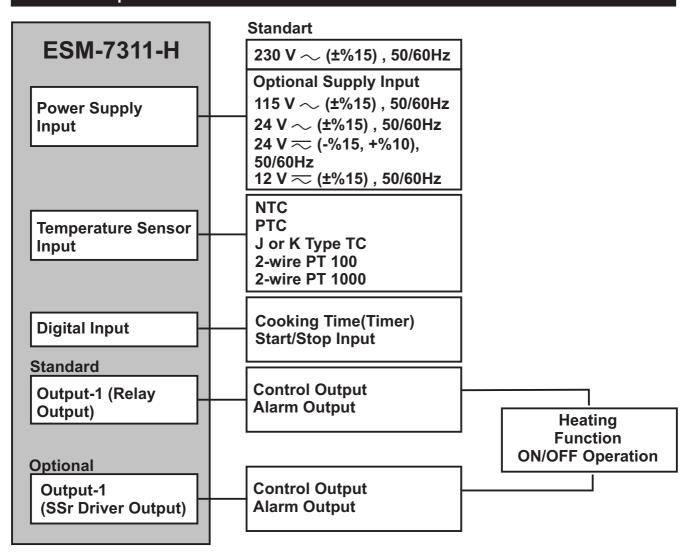

# 1.2 Ordering Information

ECM 7244LI	A	4	вс	D	E	1	FG	н	1	U	V	w	Z
ESM-7311H (35x77 DIN Size)				0		1	00	00	1	1		0	0

Α	Supply Voltage
2	24V $\sim$ ( -15%,+10% ) 50/60Hz
3	24V ∼ ( ± 15% ) 50/60Hz
4	115V ~ ( ± 15% ) 50/60Hz
5	230V ~ ( ± 15% ) 50/60Hz
6	12V $\eqsim$ ( ± 15% ) 50/60Hz
9	Customer

BC	Input Type	Sca	le(°C)
05	J ,Fe CuNi IEC584.1(ITS90)	0°C	800°C
10	K ,NiCr Ni IEC584.1(ITS90)	0°C	999°C
11	PT 100 , IEC751(ITS90)	-50°C	400°C
09	PT 100 , IEC751(ITS90)	-19.9°C	99.9°C
12	PTC (Note-1)	-50°C	150°C
15	PTC (Note-1)	-19.9°C	99.9°C
14	PT 1000 , IEC751(ITS90)	-50°C	400°C
13	PT 1000, IEC751(ITS90)	-19.9°C	99.9°C
18	NTC (Note-1)	-50°C	100°C
19	NTC (Note-1)	-19.9°C	99.9°C

Note-1 : If input type is selected PTC or NTC (BC = 12, 15, 18, 19), Temperature sensor is given with the device. For this reason, If input type is selected as PTC, sensor type (V = 0,1 or 2) or If input type is selected as NTC, sensor type (V = 0,3 or 4) must be declared in ordering information.

Е	Output-1
1	Relay Output ( resistive load 10 A@250 V ~, 1 NO + 1NC )
2	SSR Driver Output (Maximum 15 mA@ 5 V ===)

٧	Temp. Sensor which is given with ESM 7311H
0	None
1	PTC-M6L40.K1.5 (PTC Air Probe with 1.5 m silicon cable)
2	PTCS-M6L30.K1.5.1/8" (PTC Liquid Probe with 1.5 m silicon cable)
3	NTC-M5L20.K1.5 (NTC Probe, thermoplastic moulded with 1.5 m cable for cooling application)
4	NTC-M6L50.K1.5 (NTC Probe, stainless steel housing with 1.5 m cable for cooling application)
9	Customer

All order information of ESM-7311-H heating controller are given on the table at left. User may form appropriate device configuration from information and codes that at the table and convert it to the ordering codes.

Firstly, supply voltage then other specifications must be determined. Please fill the order code blanks according to your needs.

Please contact us, if your needs are out of the standards.



ightharpoonup  $\Rightarrow$  Vdc or Vac can be applied.

# 1.3 Warranty

EMKO Elektronik warrants that the equipment delivered is free from defects in material and workmanship. This warranty is provided for a period of two years. The warranty period starts from the delivery date. This warranty is in force if duty and responsibilities which are determined in warranty document and instruction manual performs by the customer completely.

#### 1.4 Maintenance

Repairs should only be performed by trained and specialized personnel. Cut power to the device before accessing internal parts.

Do not clean the case with hydrocarbon-based solvents (Petrol, Trichlorethylene etc.). Use of these solvents can reduce the mechanical reliability of the device. Use a cloth dampened in ethyl alcohol or water to clean the external plastic case.

#### 2.Installation



Before beginning installation of this product, please read the instruction manual and warnings below carefully.

#### In package,

- -One piece unit
- Two pieces mounting clamps
- One piece instruction manual

A visual inspection of this product for possible damage occured during shipment is recommended before installation. It is your responsibility to ensure that qualified mechanical and electrical technicians install this product.

If there is danger of serious accident resulting from a failure or defect in this unit, power off the system and separate the electrical connection of the device from the system.

The unit is normally supplied without a power supply switch or a fuse. Use power switch and fuse as required.

Be sure to use the rated power supply voltage to protect the unit against damage and to prevent failure.

Keep the power off until all of the wiring is completed so that electric shock and trouble with the unit can be prevented.

Never attempt to disassemble, modify or repair this unit. Tampering with the unit may results in malfunction, electric shock or fire.


Do not use the unit in combustible or explosive gaseous atmospheres.

During the equipment is putted in hole on the metal panel while mechanical installation some metal burrs can cause injury on hands, you must be careful.


Montage of the product on a system must be done with it's fixing clamps. Do not do the montage of the device with inappropriate fixing clamp. Be sure that device will not fall while doing the montage.


It is your responsibility if this equipment is used in a manner not specified in this instruction manual.

# 2.1 General Description

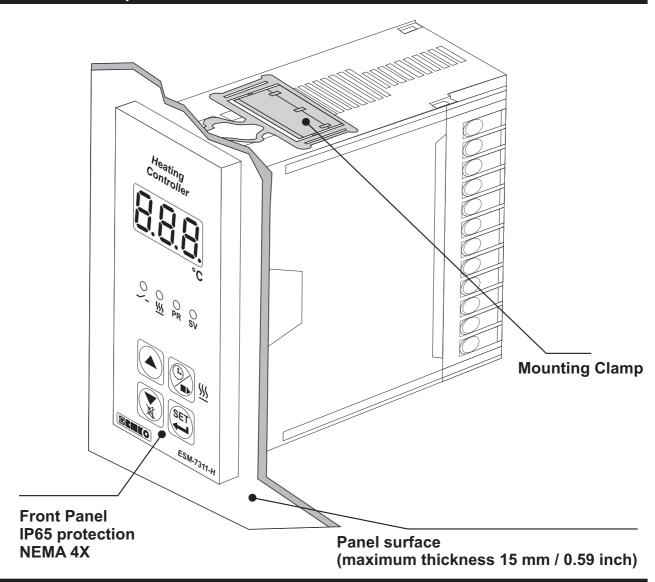

# 2.2 Front View and Dimensions of ESM-7311-H Heating Controller

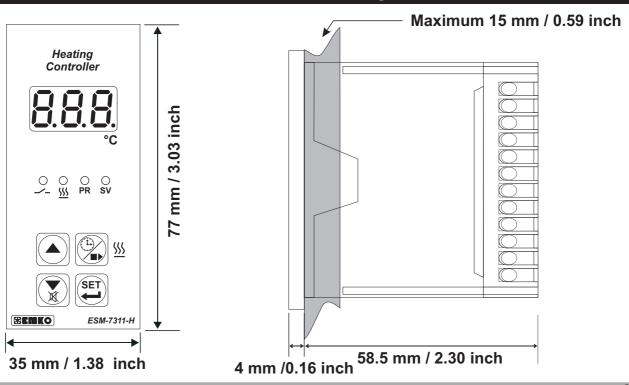

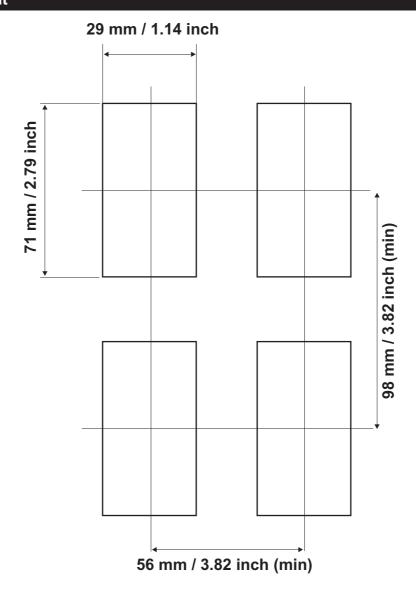

# 2.4 Environmental Ratings

# **Operating Conditions**



**Operating Temperature** : 0 to 50 °C



Max. Operating Humidity: 90% Rh (non-condensing)




Altitude : Up to 2000 m.



Forbidden Conditions: Corrosive atmosphere Explosive atmosphere

Home applications (The unit is only for industrial applications)


### 2.5 Panel Mounting

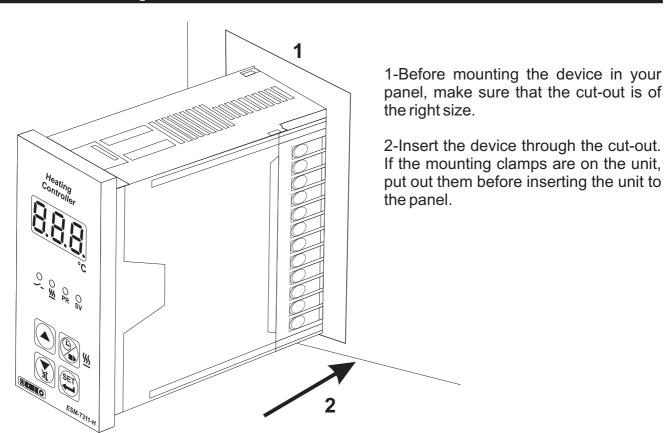



During installation into a metal panel, care should be taken to avoid injury from metal burrs which might be present. The equipment can loosen from vibration and become dislodged if installation parts are not properly tightened. These precautions for the safety of the person who does the panel mounting.

# 2.6 Installation Fixing Clamp

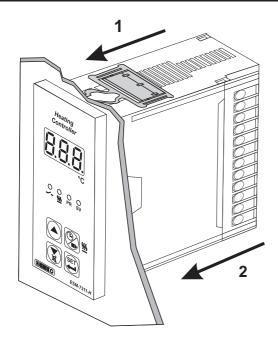

The unit is designed for panel mounting.

- 1-Insert the unit in the panel cut-out from the front side.
- 2- Insert the mounting clamps to the holes that located left and right sides of the device and make the unit completely immobile within the panel




Montage of the unit to a system must be done with it's own fixing clamps. Do not do the montage of the device with inappropriate fixing clamps. Be sure that device will not fall while doing the montage.

# 2.7 Removing from the Panel



Before starting to remove the unit from panel, power off the unit and the related system.

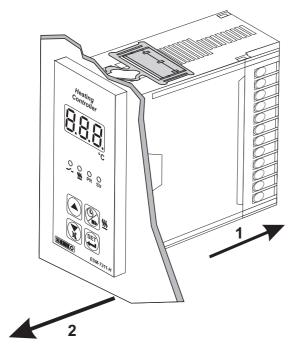

- 1-Pull mounting clamps from left and right fixing sockets.
- 2-Pull the unit through the front side of the panel

#### 3. Electrical Wiring



You must ensure that the device is correctly configured for your application. Incorrect configuration could result in damage to the process being controlled, and/or personal injury. It is your responsibility, as the installer, to ensure that the configuration is correct.

Device parameters has factory default values. These parameters must be set according to the system's needs.



Only qualified personnel and technicians should work on this equipment. This equipment contains internal circuits with voltage dangerous to human life. There is severe danger for human life in the case of unauthorized intervention.




Be sure to use the rated power supply voltage to protect the unit against damage and to prevent failure.



Keep the power off until all of the wiring is completed so that electric shock and trouble with the unit can be prevented.


### 3.1 Terminal Layout and Connection Instructions

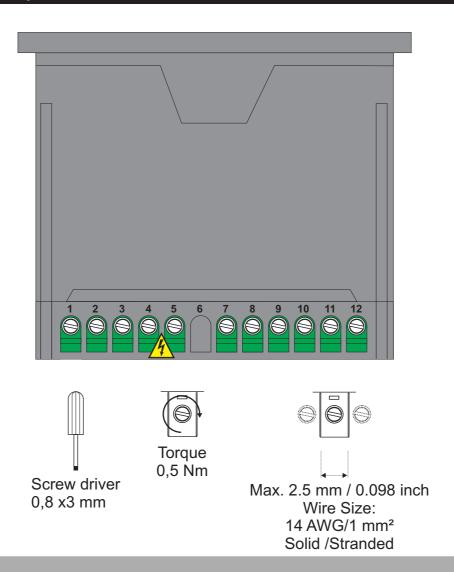

# 3.2 Electrical Wiring Diagram




Electrical wiring of the device must be the same as 'Electrical Wiring Diagram' below to prevent damage to the process being controlled and personnel injury.

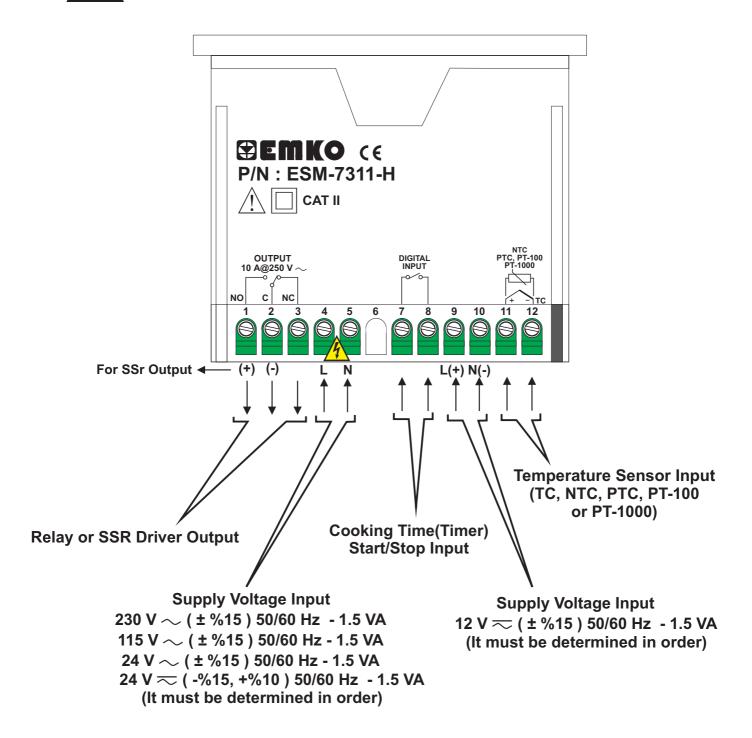




Device Label for J Type ( 0 ; 800 ) scaled, Thermocouple input,  $230V \sim$  Supply Voltage Input and Relay Output

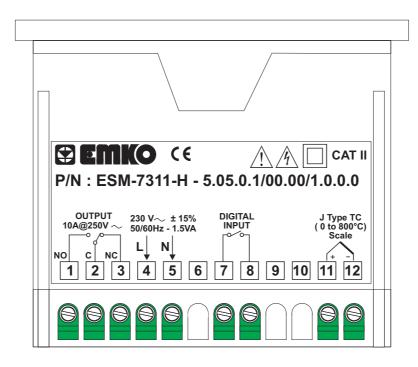


Device Label for PT-100 Type ( -19.9 ; 99.9 ) scaled, Thermoresistance input,  $12V \approx$  Supply Voltage Input and Relay Output

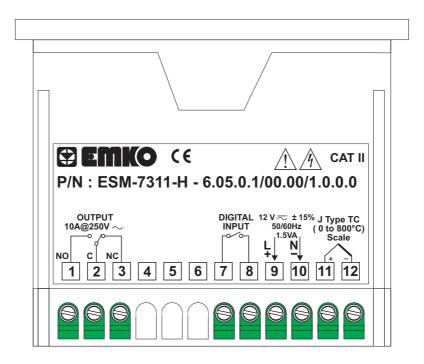


### 3.4 Supply Voltage Input Connection of the Device

# Connection of Supply Voltage Input

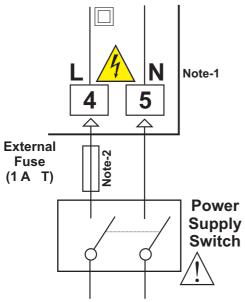

Supply Voltage 230 V  $\sim$  (± 15%) 50/60 Hz or 115 V  $\sim$  (± 15%) 50/60 Hz or 24 V  $\sim$  (± 15%) 50/60 Hz or 24 V  $\sim$  (-15%,+10%) 50/60 Hz

# Connection of Supply Voltage Input

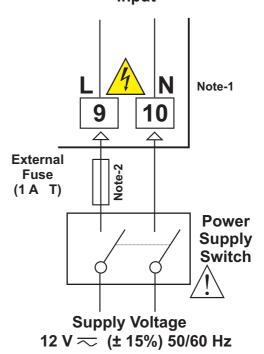

Note-1: "L" is (+), "N" is (-) for 12V === and 24V === Supply Voltage

Note-2: External Fuse is recommended



Make sure that the power supply voltage is same indicated on the instrument. Switch on the power supply only after that all the electrical connection heve been completed.

Supply voltage range must be determined in order. While installing the unit, supply voltage range must be controlled and appropriate supply voltage must be applied to the unit. Controlling prevents damages in unit and system and possible accidents as a result of incorrect supply voltage.




There is no power supply switch or fuse on the device. So a power supply switch and a fuse must be added to the supply voltage input. Power supply switch and fuse must be put to a place where user can reach easily.

Power supply switch must be two poled for seperating phase and neutral. On/Off condition of power supply switch is very important in electrical connection. On/Off condition of power supply switch must be signed for preventing the wrong connection.

External fuse must be on phase connection in  $\sim$  supply input. External fuse must be on (+) line connection in = supply input.

# 3.5 Temperature Sensor Input Connection


# 3.5.1 TC (Thermocouple) Connection

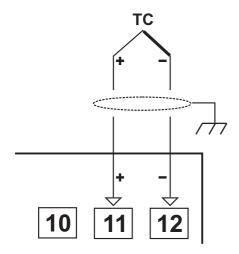


Connect the wires with the polarity as shown in the figure left.

- Always use compensation wire corresponding to the thermocouple used. If present, the shield must be connected to a proper ground.
- Input resistance is greater than 10M  $\Omega$ .

# 3.5.2 PTC and NTC Connection

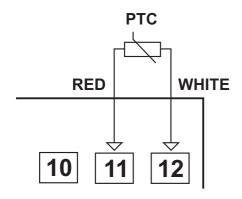

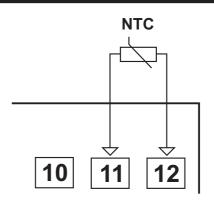


(i)


Pay attention the cable colours of PTC probe while doing the PTC probe connection.

(i)

Input resistance is greater than 10M  $\Omega$ .

# 3.5.3 PT-100 and PT-1000 Connection

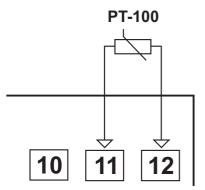


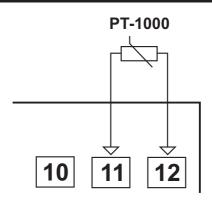


(i)

Input resistance is greater than 10M  $\Omega$ .


# 3.6 Galvanic Isolation Test Values of ESM-7311-H Temperature Controller

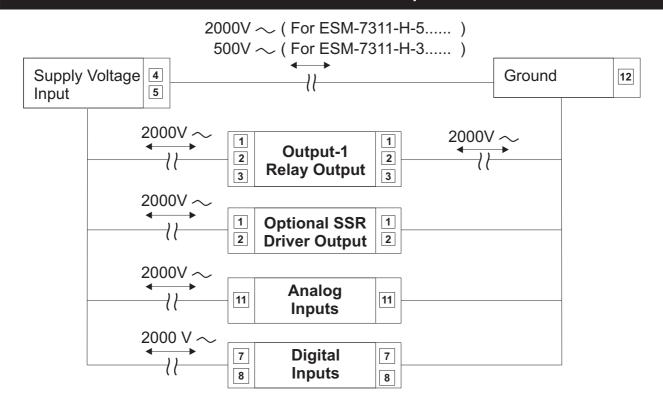

# Galvanic Isolation Test Values for the devices with 12 V Supply voltage input:

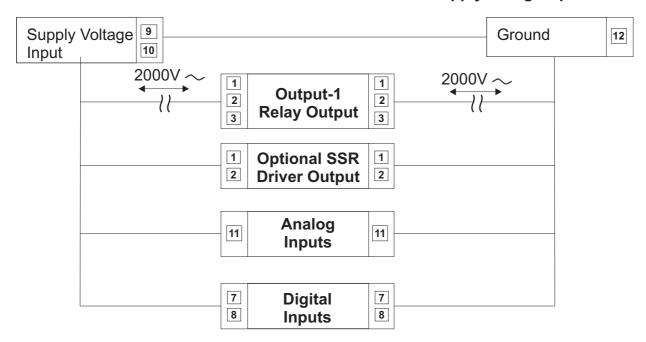


# 3.7.1 Relay Output Connection

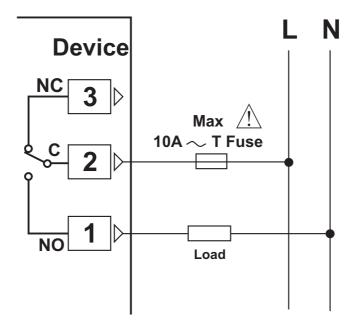



Fuses must be selected according to the application.


# 3.7.2 Output (SSR Driver Output) Connection

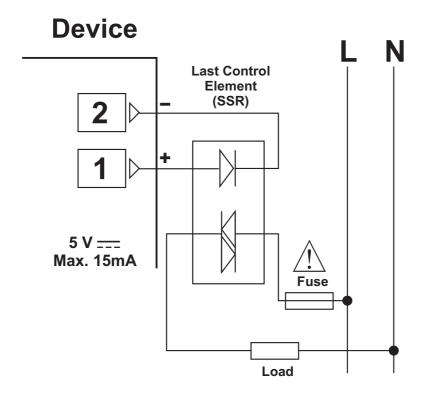



Fuses must be selected according to the application.


#### 4. Front Panel Definition and Accessing to the Menus

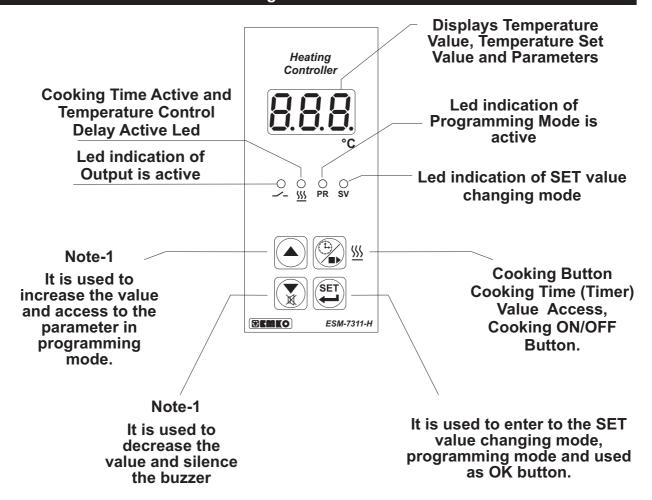

**Note-1:** If increment or decrement button is pressed for 5 seconds continuously, increment and decrement number become 10, if increment or decrement button is pressed for 10 seconds continuously, increment and decrement number become 100.


#### 4.1 Observation of Software Revision on the Displays

When power is first applied to the temperature controller, software revision number is shown on the displays.

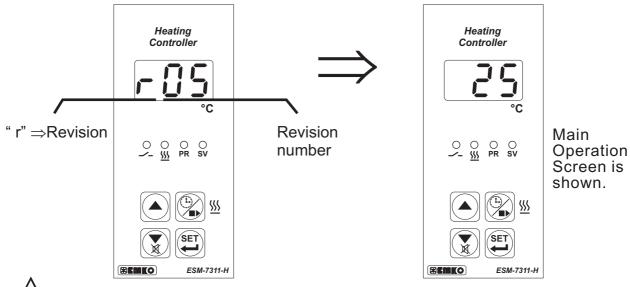


If there is an unexpected situation while opening the device, power off the device and inform a qualified personnel.

# 4.2 Changing and Saving Set Value

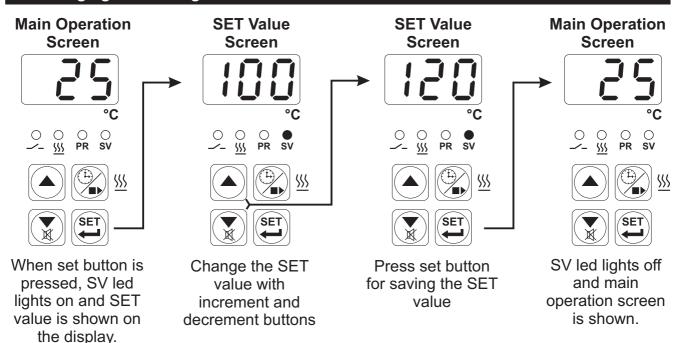

SET value changes according to maximum and minimum value of device type and scale. It can be adjusted from set value minimum parameter 5 u H value.

# 4.3 Changing and Saving Cooking Time (Timer) Parameter

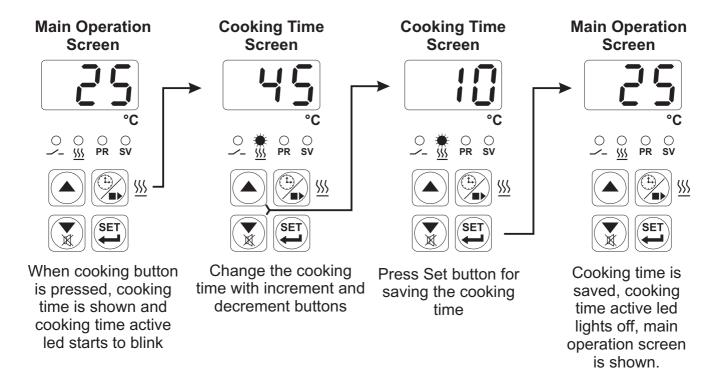



If no operation is performed in cooking time enter mode and set value enter mode for 20 seconds, device turns to main operation screen automatically.

HSE	Hysteresis Parameter for Output ( Default = 1 ) From 1 to 100 °C for TC Type devices, From 1 to 100 °C for PT-100 (-50°C, 400°C) and PT-1000 (-50°C, 400°C), From 0.1 to 10.0 °C for PT-100 (-19.9°C, 99.9°C) and PT-1000 (-19.9°C, 99.9°C) From 1 to 20 °C for PTC (-50°C, 150°C) and NTC (-50°C, 100°C), From 0.1 to 10.0 °C PTC (-19.9°C, 99.9°C) and NTC (-19.9°C, 99.9°C)
	In ON/OFF control algorithm, temperature value is tried to keep equal to set value by opening or closing the last control element. ON/OFF controlled system, temperature value oscillates continuously. Temperature value's oscillation period or amplitude around set value changes according to controlled system. For reducing oscillation period of temperature value, a threshold zone is formed below or around set value and this zone is named hysteresis.  Temperature  Time  ON  OFF
SuL	Minimum Set Value Parameter ( Default = Input Type Minimum Scale ) Set value can not be lower than this value. This parameter value can be adjusted from minimum value of device scale to maximum set value parameter $5 \mu H$
5 <sub>u</sub> H	Maximum Set Value Parameter (Default = Input Type Maximum Scale) Set value can not be greater than this value. This parameter value can be adjusted from minimum set value parameter to maximum value of the device scale
oFŁ	Process Offset Parameter ( Default = 0 ) From -100 to 100°C for TC Type devices, From -100 to 100°C for PT-100 (-50°C, 400°C) and PT-1000 (-50°C, 400°C), From -10.0 to 10.0°C for PT-100 (-19.9°C, 99.9°C) and PT-1000 (-19.9°C, 99.9°C), From -20 to 20°C for PTC (-50°C, 150°C) and NTC (-50°C, 100°C), From -10.0 to 10.0°C for PTC (-19.9°C, 99.9°C) and NTC (-19.9°C, 99.9°C)
PHd	Temperature Control Delay at Power On (Default = 0) It can be adjusted from 0 to 99 minutes.
HEI	Cooking Time (Timer) Parameter (Default = 45) It can be adjusted from 1 to 999 minutes. When it is 1, can be observed by pressing decrement button on the display. So Manual Control is selected. In Manual control, user can start and stop temperature controlling with cooking ON/OFF button or cooking time start/stop input.
PH5	Selection of Temperature Control and Starting Cooking Time (Timer) Parameter (Default = 0)
	Temperature control and cooking time (Timer) starts at power on
	Temperature control starts at power on. Cooking time (Timer) can be started by pressing cooking ON/OFF button or when cooking time start/stop input is getting closed condition.
	Temperature control and cooking time (Timer) can be started by pressing cooking ON/OFF button or when cooking time start/stop input is getting closed condition.

4.4 Programming Mode Parameter List


HE5	Cooking Time Starting Conditions Parameter ( Default = 0 ) This parameter can be observed if cooking time (Timer) ☐ is ≥ 1.								
	Cooking time (Timer) is started with cooking ON/OFF button or when cooking time start/stop input is getting closed condition.								
	Cooking time (Timer) is started when temperature reaches to the process set value after pressing cooking ON/OFF button or when cooking time start/stop input is getting closed condition.								
H[_	Temperature Controlling Continuity Selection Parameter ( Default = 0 ) Temperature controlling can be continues or stopped according to the selection. This parameter can be observed if cooking time (Timer) $\boxed{\text{H} \ \ \ }$ is $\geq 1$								
	Continuous Operation: Temperature control starts after the temperature control starting delay at power on PHa is expired and continues. If buzzer function selection parameter buF Is 1 or 4, at the end of the cooking time, (Timer) internal buzzer operates to indicate cooking time has finished.								
	Interrupted Operation: Temperature control starts after temperature control starting delay at power on PHB is expired. Temperature control can be stopped at the end of the cooking time (Timer) or by pressing cooking ON/OFF button or when cooking time start/stop input is getting open condition. Temperature control does not start till cooking ON/OFF button is pressed again or when cooking time start/stop input is getting closed condition again.								
RL5	Temperature Alarm Function Selection Parameter ( Default = 0 )								
	Temperature Alarm function is inactive.								
	Absolute alarm is selected. If temperature is lower than $\text{AuL}$ and higher than $\text{AuH}$ , then alarm is on.								
	Relative alarm is selected. Alarm operates according to the set value. If temperature is below (Set - Rull ) or above (Set + Rull ), alarm occurs.								
RuL	Minimum Alarm Parameter ( Default = Input Type Minimum Scale ) It can be adjusted from minimum scale of the device to maximum alarm value (AuH).								
RuH	Maximum Alarm Parameter (Default = Input Type Maximum Scale) It can be adjusted from minimum alarm value (AuL) to maximum scale of the device.								
RdL	Alarm Delay Parameter (Default = 0) If an alarm occurs, delay can be defined with this parameter. It can be adjusted from 0 To 99 minutes.								
RP d	Alarm Delay After Power On Parameter (Default = 0) This parameter defines the delay for the alarm is being active after power on. It can be adjusted from 0 to 99 minutes.								
ЬыЕ	Buzzer Function Selection Parameter ( Default = 1 )								
	Buzzer is inactive.								
	Buzzer is active at the end of the cooking time.								
	Buzzer is active if an alarm occurs.								
	Buzzer is active during sensor failures.								
	Buzzer is active at the end of the cooking time, alarm or sensor failures.								

bon	Buzzer is Active During This Time (Default =)  This parameter can be observed if buzzer function selection  buF is ≥ 1.  It can be adjusted from 1 to 99 minutes. When this parameter is 1, if decrement button is pressed, is observed. Then buzzer becomes active till buzzer silence button					
PrE	Button	Protection Parameter ( Default = 0 )				
		There is no protection				
	1	Cooking time(Timer) can not be changed. Cooking ON/OFF operation is not performed.				
	2	SET value can not be changed				
	3	Cooking time (Timer) and set value can not be changed. Cooking ON/OFF operation is not performed.				
	4	Cooking time (Timer) and set value can not be changed. Cooking ON/OFF operation is performed when button is pressed.				
PR5	Passwo	nming Mode Accessing Password (Default = 0) rd for entering to the programming mode is defined with this parameter. e adjusted from 0 to 999. If it is 0, programming mode accessed without				

# 4.5 Cooking Time (Timer) ON/OFF Operation


entering password.

# 4.5.1 Cooking Time (Timer) ON/OFF Operation with Cooking Button

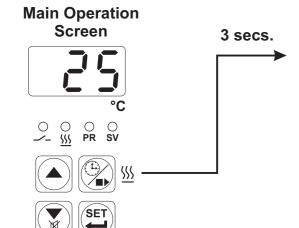

In main operation screen, If cooking button is pressed for 3 seconds, then cooking time (Timer) is started and cooking time active led becomes active. While cooking time (Timer) continues if cooking button is pressed for 3 seconds, cooking time (Timer) is finished and cooking time active led lights off. If button protection parameter \( \bar{P}\_{\subset} \bar{E} \) = 4 cooking time (Timer) ON/OFF operation is performed when button is pressed.


# 4.5.2 Cooking Time (Timer) ON/OFF Operation with Cooking Time Start/Stop Input

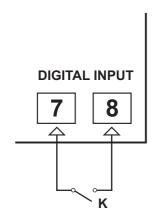


When K switch that is connected to the cooking time start/stop input, getting closed condition, cooking time (Timer) is started and cooking time active led becomes active. While cooking time (Timer) continues if K switch getting open condition, cooking time (Timer) is finished and cooking time active led lights off.


# 4.6 Operation Graphics of ESM-7311-H Heating Controller


1-When cooking time parameter  $\boxed{H + 1} \ge 1$ , if selection of temperature control and starting the cooking time parameter  $\boxed{P + S} = 0$  (Temperature control and cooking time starts at power on) is selected;

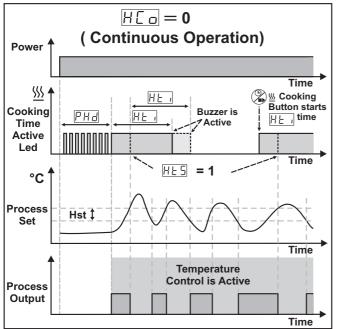

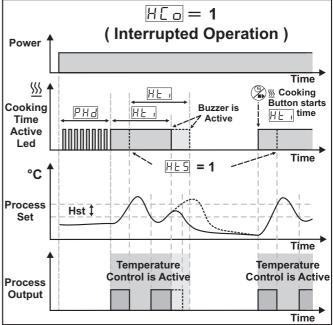


2-When cooking time parameter  $\boxed{H \not\vdash I} \ge 1$ , if selection of temperature control and starting the cooking time parameter  $\boxed{PHS} = 1$  (Temperature control starts at power on. Cooking time (Timer) can be started by pressing cooking ON/OFF button or when cooking time start/stop input is getting closed condition) is selected;

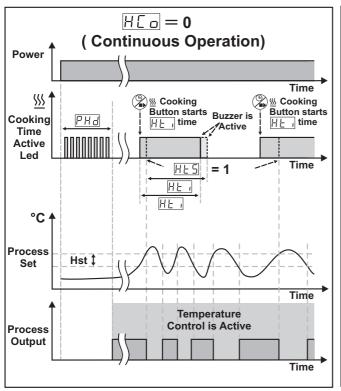


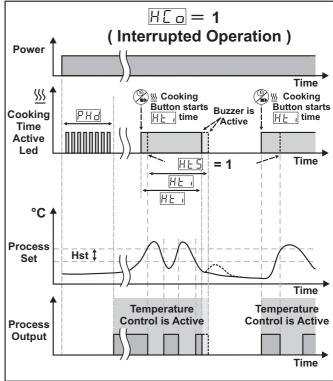


3-When cooking time parameter  $\boxed{H \not \sqsubseteq \ } \ge 1$ , if selection of temperature control and starting the cooking time parameter  $\boxed{P \not \vdash \ } = 2$  (Temperature control and cooking time (Timer) can be started by pressing cooking ON/OFF button or when cooking time start/stop input is getting closed condition) is selected;


HE 1 = ---

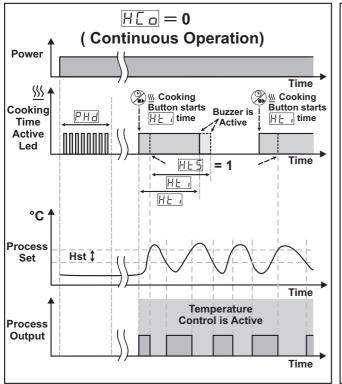


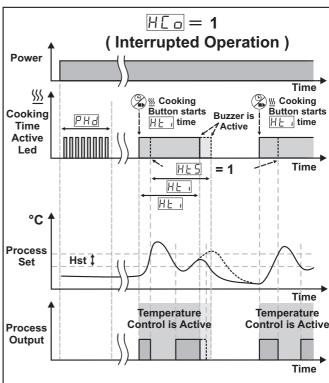

4- Manual Control : If cooking time (Timer)

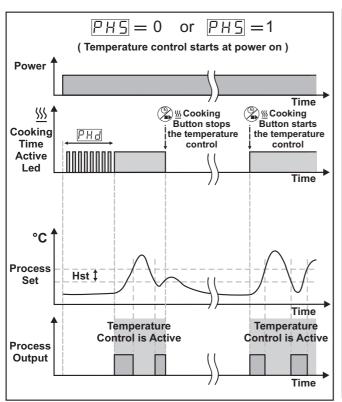


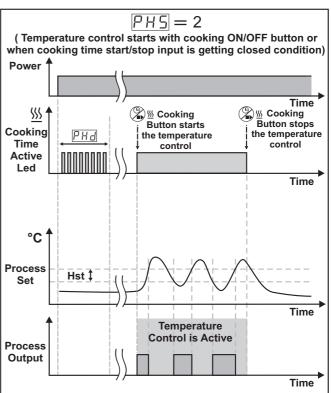

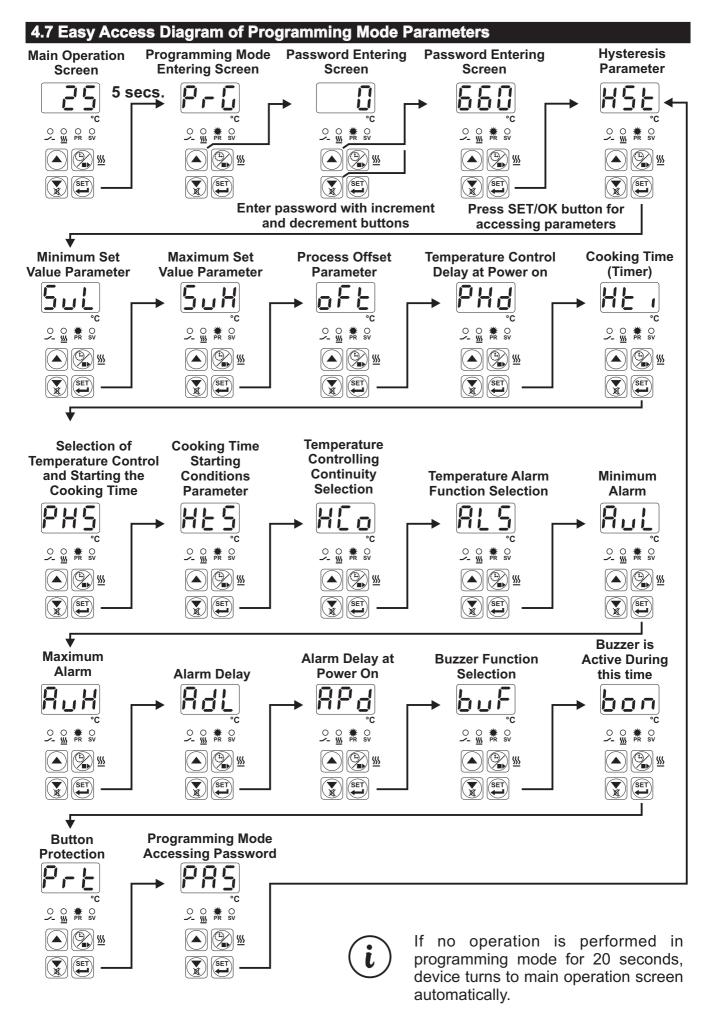

# 4.8 Entering to the Programming Mode, Changing and Saving Parameters

# **Main Operation Screen**

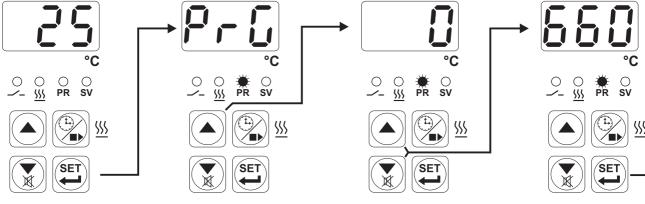

When SET button is pressed for 5 seconds, "PR" led starts to blink. If programming mode entering password is different from 0, programming mode entering screen Prolis is observed.

# Programming Mode Entering Screen

Press increment button for accessing to the password entering screen.

# Password Entering Screen


Enter programming mode accessing password with increment and decrement buttons.

# Password Entering Screen

Press SET/OK button for accessing to the parameters.


**Note-1:** If programming mode accessing password is 0, hysteresis screen H5E is observed instead of programming screen accessing password PrD

**Note-2:** Parameters can be observed by pressing SET/OK button in password entering screen without entering the programming mode entering password. But parameters can not be changed.

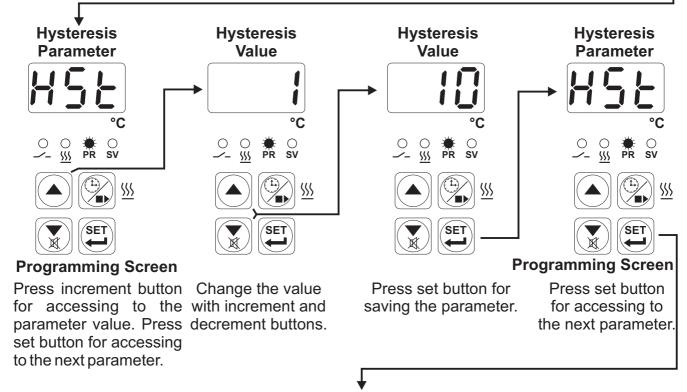



If no operation is performed in programming mode for 20 seconds, device turns to main operation screen automatically.

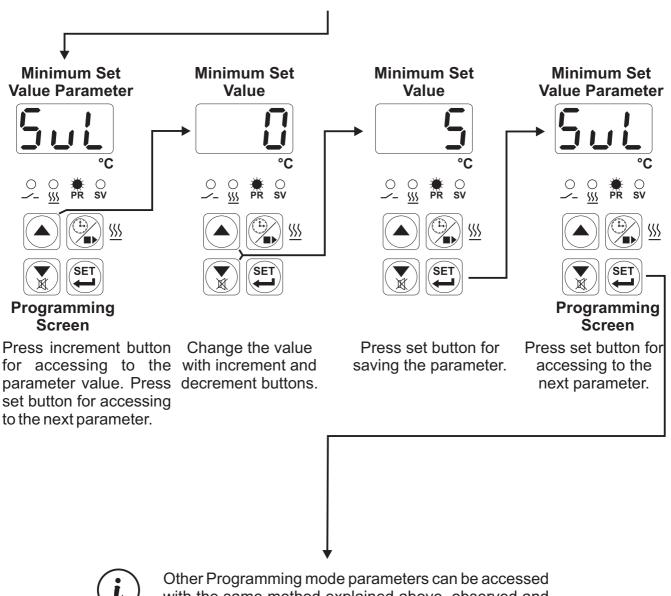



Other Programming mode parameters can be accessed with the same method explained above, observed and changed.



If no operation is performed in programming mode for 20 seconds, device turns to main operation screen automatically.

### 5. Failure Message in ESM-7311-H Heating Controller





#### 2- Blinking the Screen Value

If temperature higher than the alarm parameters limit, value on the screen starts to blink

# Example-1:

If alarm function selection parameter I In programming section is 1 (Absolute alarm) and minimum alarm parameter I is 20; When temperature is less than 20°C, value on the screen starts to blink. Also if buzzer function selection parameter I I I is 2 or 4, then internal buzzer is on.



#### Example-2:

If alarm function selection parameter  $\begin{bmatrix} A & C \end{bmatrix}$  in programming section is 1 (Absolute Alarm) and maximum alarm parameter  $\begin{bmatrix} A & C \end{bmatrix}$  is 50 When temperature is above 50 °C, value on the screen starts to blink. Also buzzer function selection parameter  $\begin{bmatrix} A & C \end{bmatrix}$  is 2 or 4, then internal buzzer is on.

#### 6. Specifications

**Device Type** : Heating Controler

Housing&Mounting : 35 mm x 77 mm x 62.5 mm plastic housing for panel

Mounting. Panel cut-out is 71 x 29 mm

**Protection Class** : Ip65 at front, IP20 at rear) Weight : Approximately 0.20 Kg.

: Standard, indoor at an altitude of less than 2000 meters **Environmental Ratings** 

with none condensing humidity

Storage / Operating Temperature: -40 °C to +85 °C / 0 °C to +50 °C **Storage / Operating Humidity** : 90 % max. (None condensing)

Installation : Fixed installation

**Overvoltage Category** 

**Pollution Degree** : II, office or workplace, none conductive pollution

**Operating Conditions** : Continuous

**Supply Voltage and Power** : 230 V ~ (± 15%) 50/60 Hz. 1.5 VA

> 115 V ~ (± 15%) 50/60 Hz. 1.5 VA 24 V ~ (± 15%) 50/60 Hz. 1.5 VA

24 V  $\approx$  (- %15, + %10) 50/60 Hz. 1.5 VA

12 V  $\approx$  (± %15) 50/60 Hz. 1.5 VA

**Temperature Sensor Inputs** : NTC, PTC, TC, RTD **NTC Input Type** : NTC (10 kΩ @.25 °C) **PTC Input Type** : PTC (1000 Ω @.25 °C)

: J, K (IEC584.1)(ITS90) Thermocouple Input Types

**Thermoresistance Input Type** : PT-100, PT-1000 (IEC751)(ITS90)

**Accuracy** : ±1 % of full scale for thermocouple and thermoresistance

**Cold Junction Compensation** : Automatically ± 0.1°C/1°C

**Sensor Break Protection** : Upscale

Sampling Cycle : 3 samples per second

**Control Form** : ON / OFF

**Relay Output** : 10 A@250 V ~ for resistive load

(Electrical Life: 100.000 switching at full load)

**Optional SSR Output** : Maximum 15 mA@5V ===

**Display** : 14 mm Red 3 digits LED Display **LED** : SV (Green), Output (Red), PR (Red), Cooking Time Active (Red) 3 mm Led

: ≥83dB **Internal Buzzer** 

: FH[ ,**C € Approvals**